


David Frank Furniture tilting assembly instructions

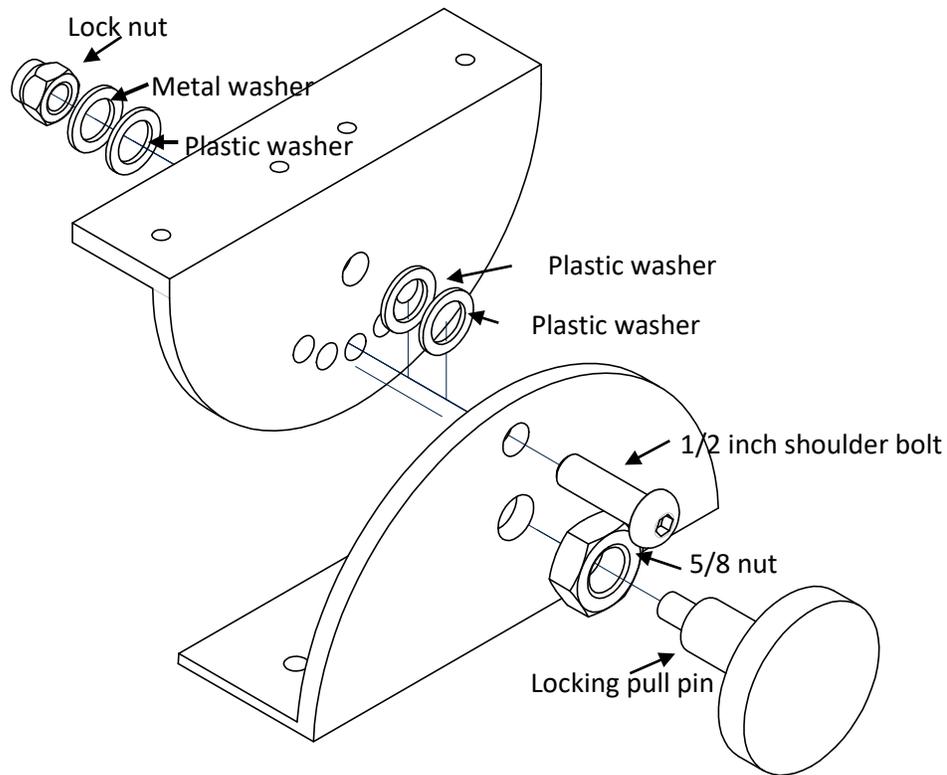

Tools needed

1. 3/16 allen key
2. 1/2 inch socket
3. 1/4 allen key for bolting into swing post
4. ladder

Step one

Slide the canopy out all the way on both sides and lock into place.

Step two

Start with one side of the swing at a time. Un-bolt the four 1/4 bolts using the 5/32 allen key. Push the canopy joints inward so that they are resting on the top of the cross bar to give you clearance to add the titling mechanism.

Step Three

Using the 4 1/4 x 1 inch allen head bolts, included in the box. Bolt down the bottom pivot securing without striping the allen heads. The Face of the bottom pivot should be facing out. Take the shoulder bolt and use a plastic washer before pushing it through the hole. Use two more 3/8th washers before attaching the top pivot. Place one more plastic washer and the metal washer on the outside then tight up with the lock nut. Once tightening it should be difficult to tilt by hand as there is no leverage from the canopy yet.

Step Four

Take the pull pin and add the 5/8 nut on to it, now screw it into the top hole of the bottom pivot. Line up the holes with the pull pin. Once tightened bring the canopy rails and rest on top of the top pivot. Using the four 1/4 x 2 inch bolt that took off in step one slide them through the canopy holes and the top pivot use the metal washer and nut tighten them from under neath using the lock nuts provided. Once secure you can do the other side.